

Removal

- Disconnect the battery cables.

-

-
- GR0520-A


-
- Diagram illustrating the connection of the power cable to the power jack on the back of the device. The power cable is shown being inserted into the power jack.

-
- GR0534A


-
- GR0554-A

-
- Diagram showing the connection of the power window switch to the power window motor. An arrow points to the connection point.


8. Disconnect the radio antenna cable.

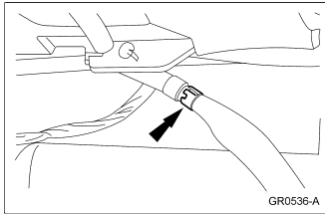


9. Remove the LH and RH cowl trim panels.

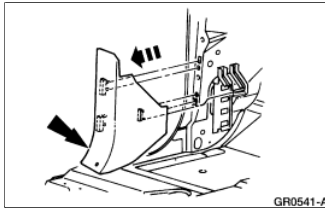


10. Disconnect the electrical connectors and the ground wires on the RH cowl panel.

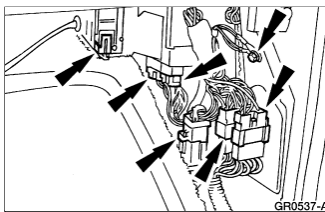


11. Disconnect the power distribution box from the bracket and position aside.

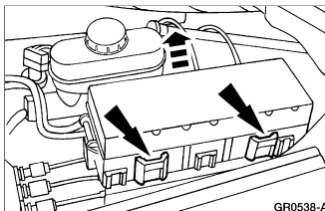

12. Remove the bulkhead wiring harness from inside the engine compartment.
1. Loosen the three bolts.
 2. Disconnect the three electrical connectors.

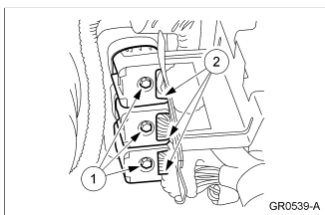

13. Pull the bulkhead electrical connector handle to disconnect the harness.

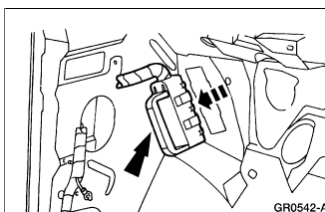

14.  **WARNING: ALWAYS WEAR SAFETY GLASSES WHEN REMOVING AND HANDLING AN AIR BAG.**


 **WARNING: CARRY A LIVE AIR BAG WITH THE BAG AND TRIM COVER POINTED AWAY FROM YOUR BODY. AN ACCIDENTAL DEPLOYMENT WILL THEN DEPLOY WITH MINIMAL CHANCE OF INJURY.**

 **WARNING: PLACE A LIVE AIR BAG ON A BENCH OR OTHER SURFACE WITH THE TRIM COVER UP.**


Remove the passenger side air bag module (044A74).

1. Remove the two screws from inside the glove compartment.
2. Remove the passenger side air bag module.


- Disconnect the electrical connector.

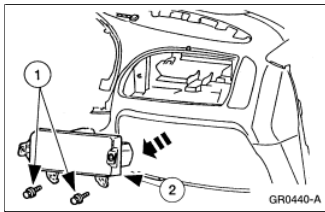


15. Remove the floor console, refer to the procedure in this section.
16. Remove the defrost grille.

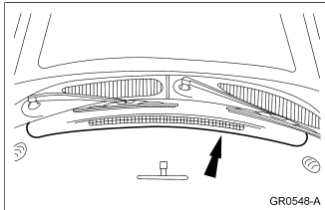


17. Remove the instrument panel brace bolt under the steering column.

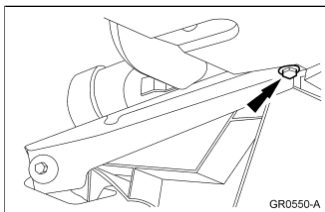


18. Remove the instrument panel fuse door (045D62).

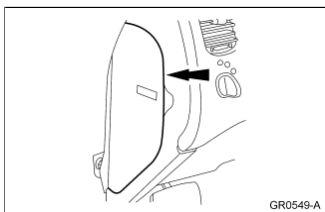


19. Remove the two instrument panel bolts on the LH side of the instrument panel (04304).

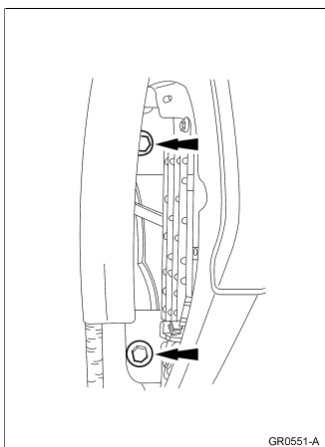


20. Remove the instrument panel bolt on the RH side of the instrument panel.

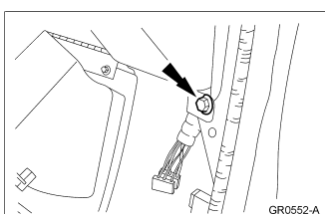


21. Remove the five instrument panel bolts along the top of the instrument panel.

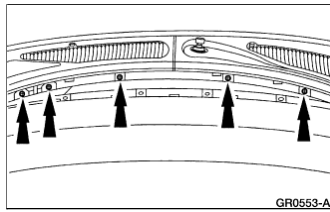

22. Disconnect the instrument panel to body harness.
1. Loosen the bolt.
 2. Disconnect the harness.

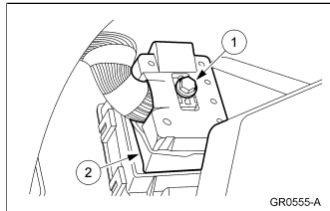


23. Remove the windshield side garnish mouldings.

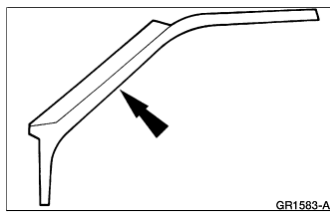


24. Remove the instrument panel.
- If necessary, transfer components to the new instrument panel.

Installation


1. Position the instrument panel.
2. Install the instrument panel to body harness.
 1. Position the harness.
 2. Install the bolt.

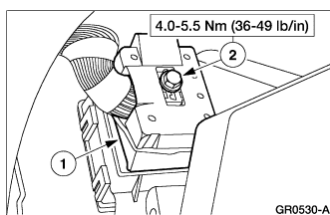


3. Install the windshield side garnish mouldings.

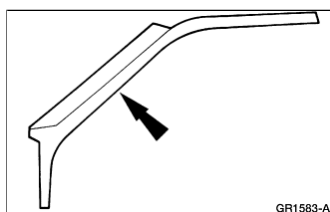


4. Install the instrument panel mounting bolt on the RH side of the instrument panel.

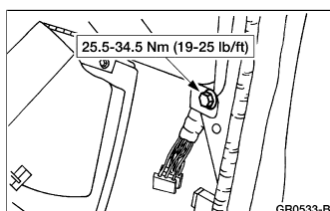


5. Install the instrument panel mounting bolts on the LH side of the instrument panel.

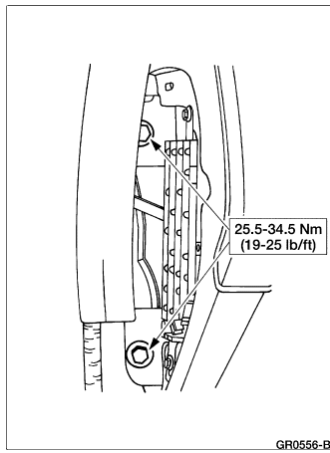


6. Install the five instrument panel bolts along the top of the instrument panel.

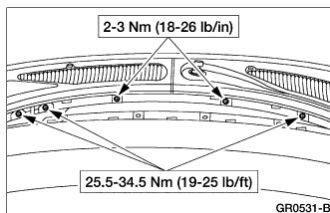


7. Install the instrument panel fuse door.

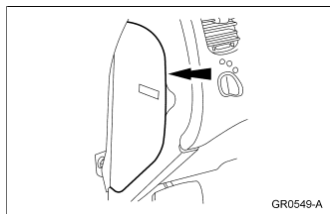

8. Install the instrument panel brace bolt.

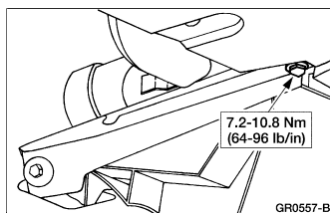

9. Install the defrost grille.

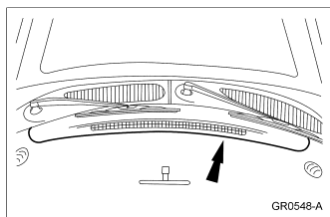

10. Install the floor console; refer to the procedure in this section.


11. **⚠ WARNING: ALWAYS WEAR SAFETY GLASSES WHEN REMOVING AND HANDLING AN AIR BAG.**

⚠ WARNING: CARRY A LIVE AIR BAG WITH THE BAG AND TRIM COVER POINTED AWAY FROM YOUR BODY. AN ACCIDENTAL DEPLOYMENT WILL THEN DEPLOY WITH MINIMAL CHANCE OF INJURY.


⚠ WARNING: PLACE A LIVE AIR BAG ON A BENCH OR OTHER SURFACE WITH THE TRIM COVER UP.

Install the passenger side air bag module.


1. Connect the electrical connector.
2. Position the passenger side air bag module.
3. Install the two screws.

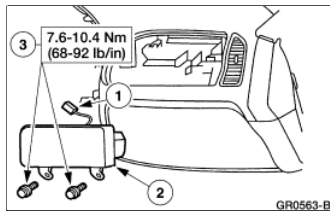


12. Position the bulkhead electrical connector handle.

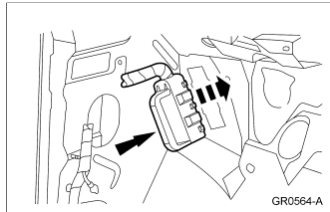


13. Install the bulkhead wiring harness.
1. Position the electrical connectors.
 2. Install the three bolts.

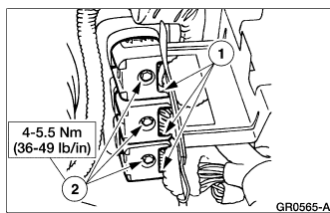


14. Install the power distribution box onto the power distribution box bracket.

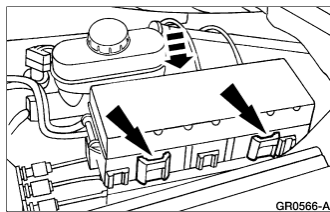


15. Connect the electrical connectors and the ground wires on the RH cowl panel.

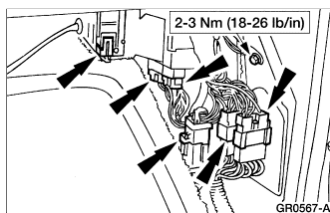


16. Install the LH and RH cowl trim panels.

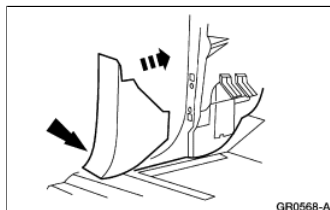


17. Connect the radio antenna cable.

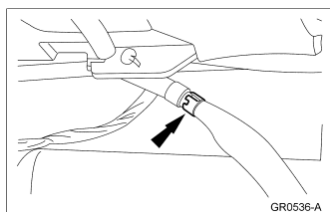


18. Connect the climate control vacuum connector.

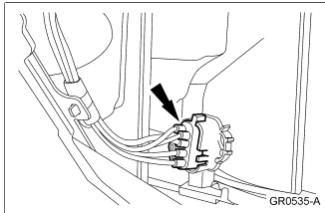


19. Connect the blend door motor electrical connector.

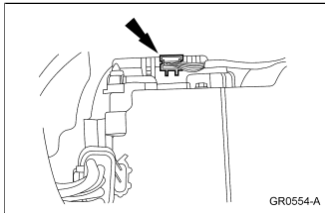

20. Raise and secure the glove compartment door.
- Press the two glove compartment door release tabs inward while raising the glove compartment door.

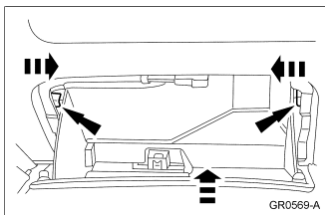


21. Connect the brake on/off (BOO) switch electrical connector.

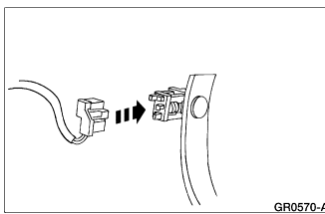

22. Install the steering column; refer to [Section 211-04](#).

23. Install the front floor console tray.

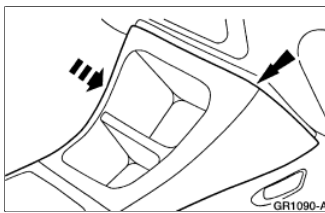

24. **NOTE:** When the battery is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven 16 km (10 miles) or more to relearn the strategy.

Connect the battery cables.

