


## General Procedures

### Adjustment

#### All vehicles

1. Depress and release the brake pedal 10 times.
2. Release the parking brake.
3. Raise and support the vehicle.  
For additional information, refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

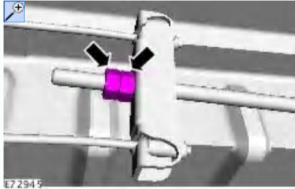

4. Settle the parking brake cable in five stages.
  - Stage 1: Remove the parking brake cable adjustment nut lock nut.
  - Stage 2: Tighten the parking brake cable adjustment nut to 8 Nm.
  - Stage 3: Loosen the parking brake cable adjustment nut to the end of the thread.
  - Stage 4: Carry out stages 2 and 3 a further three times.
  - Stage 5: Raise the parking brake control to its highest position.

5. Release the parking brake.
6. Loosen the parking brake cable adjustment nut until the brake caliper levers contact the brake caliper abutment on both sides.

#### 460 Series vehicles



7. **NOTE: Make sure the parking brake control is fully released.**  
Adjust the parking brake cable in three stages.
  - Stage 1: Using a gauge (e.g. a dial gauge) tighten the parking brake cable adjustment nut until a movement of both parking brake levers is observed. Movement of each lever should be 1 mm MAX.
  - Stage 2: Tighten the parking brake cable adjustment nut two complete turns.
  - Stage 3: Install the parking brake cable adjustment nut lock nut.

#### All vehicles



8. **NOTE: Make sure the parking brake control is fully released.**  
Adjust the parking brake cable in five stages.
  - Stage 1: Insert a 1.0 mm spacer between the parking brake lever and the brake caliper abutment on both sides.
  - Stage 2: With the aid of another technician, tighten the parking brake cable adjustment nut until movement is observed on one of parking brake levers.
  - Stage 3: Remove the spacers.
  - Stage 4: Tighten the parking brake cable adjustment nut two complete turns.
  - Stage 5: Install the parking brake cable adjustment nut lock nut.

9. Lower the vehicle.