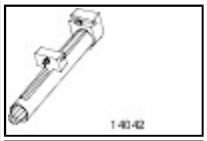
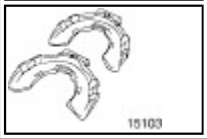
Print


Removal and Installation

Special Tools


	14-042Spring compressor
	15-103Adaptor for 14-042

Remove

1. Compress the spring.

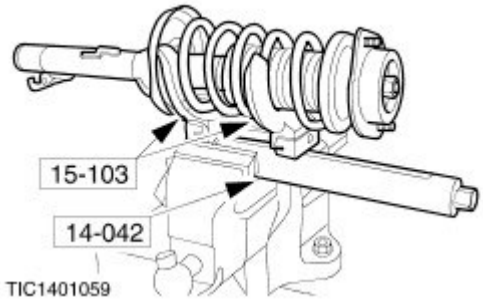


2. Disassemble the suspension unit assembly.
   1. Remove the nut cap.
   2. Remove the nut.
   3. Remove the top mount cup.
   4. Remove the top mount.
   5. Remove the thrust bearing.
   6. Remove the upper spring seat.
   7. Remove the suspension unit.
   8. Remove the gaiter.
   9. Remove the bump stop.

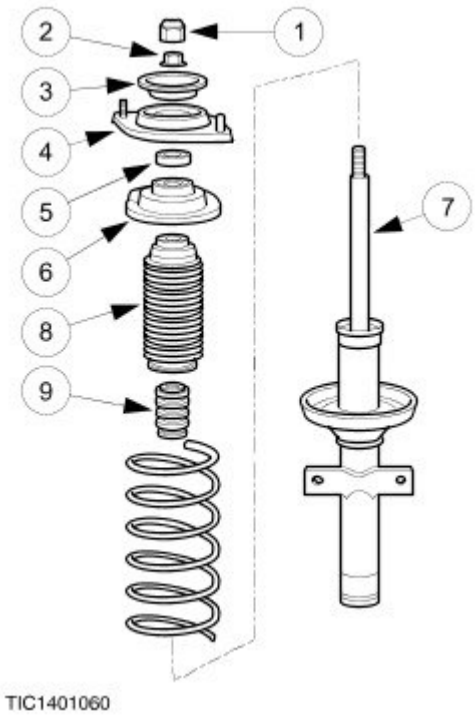

Install

3. Refit the components in reverse order.

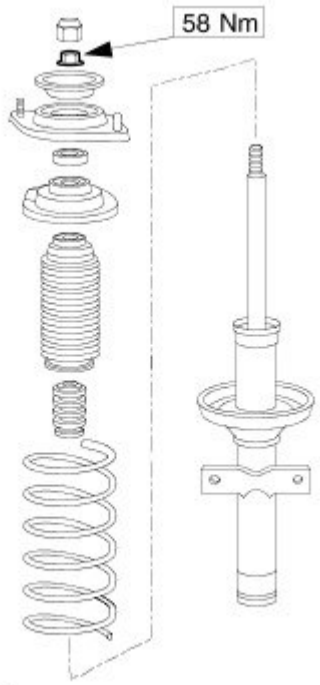

TIC1401061