



43-02-001 , Power Mirrors with Module , Without memory



P91
Central Junction Box (CJB)
30
F26
30A
01-03
9
C410
Fuse Details
S44
29-AD12
1.5 OG/YE
6
C738
29-AJ80
1.5 OG
N193
Power mirror adjust switch
[0] Rest
[1] Up
[2] Down
[3] Left
[4] Right
[5] Passenger side mirror
[6] Driver side mirror
10-AJ86A
.5 GY/RD
8-AJ86A
.5 WH/RD
9-AJ85A
.5 BN
10-AJ87
.5 GT/BK
8-AJ87
.5 WH/BK
C461b
C461a
A91
Multifunction module, driver door
De-icing
14S-HB35
.5 VT/BK
10-AD8
.5 GY/VT
8-AD7
.5 WH/RD
9-AJ85
.5 BN
C740
9-AD16
M75
Mirror motor, driver side
[1] Up/down
[2] Left/right
[3] Heater
31-HB35
.5 BK
Ground Distribution
Ground Distribution
Ground Distribution

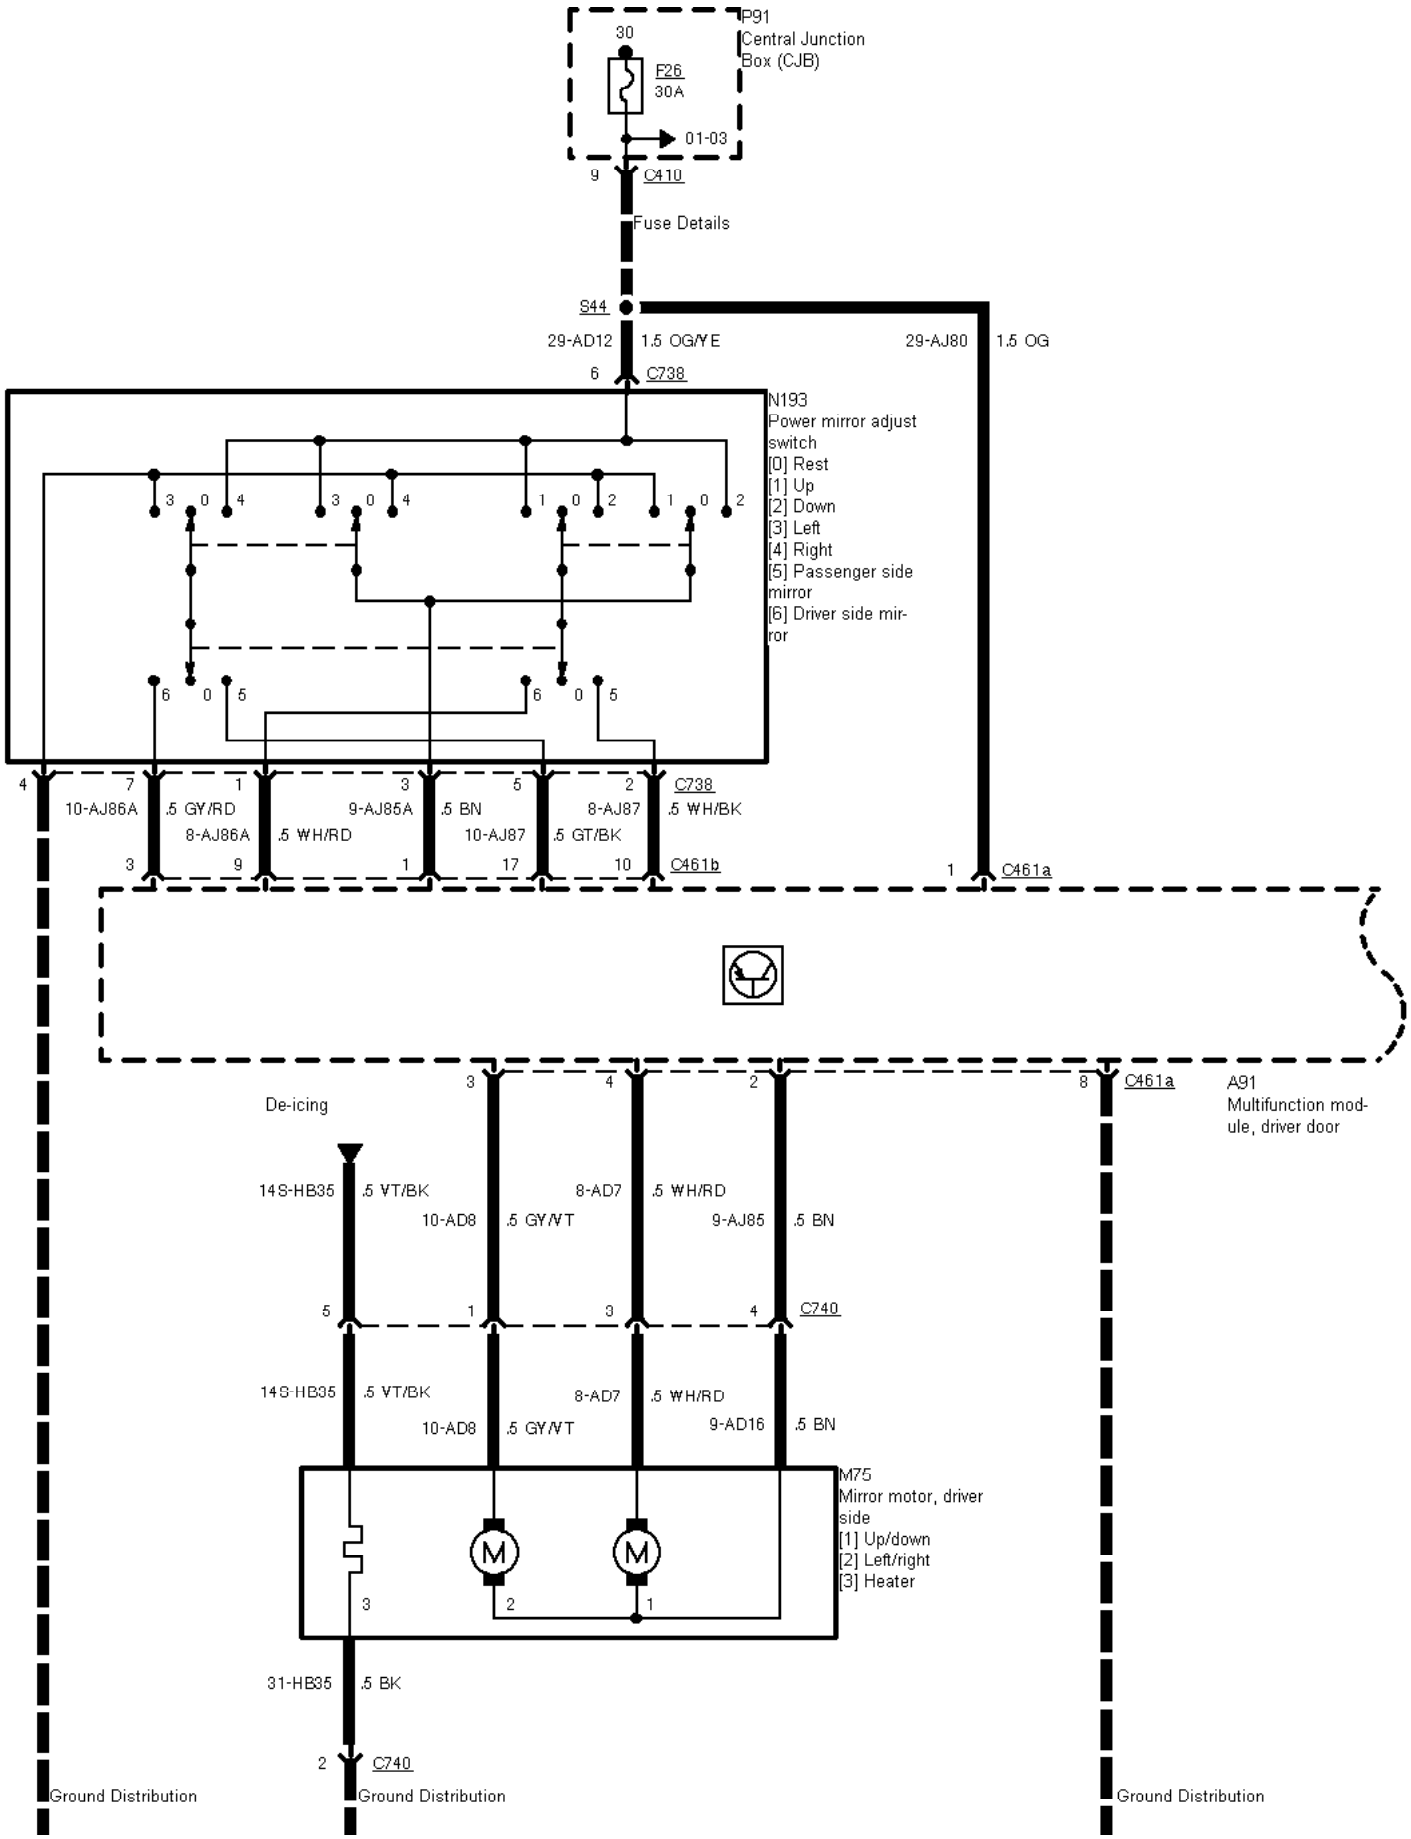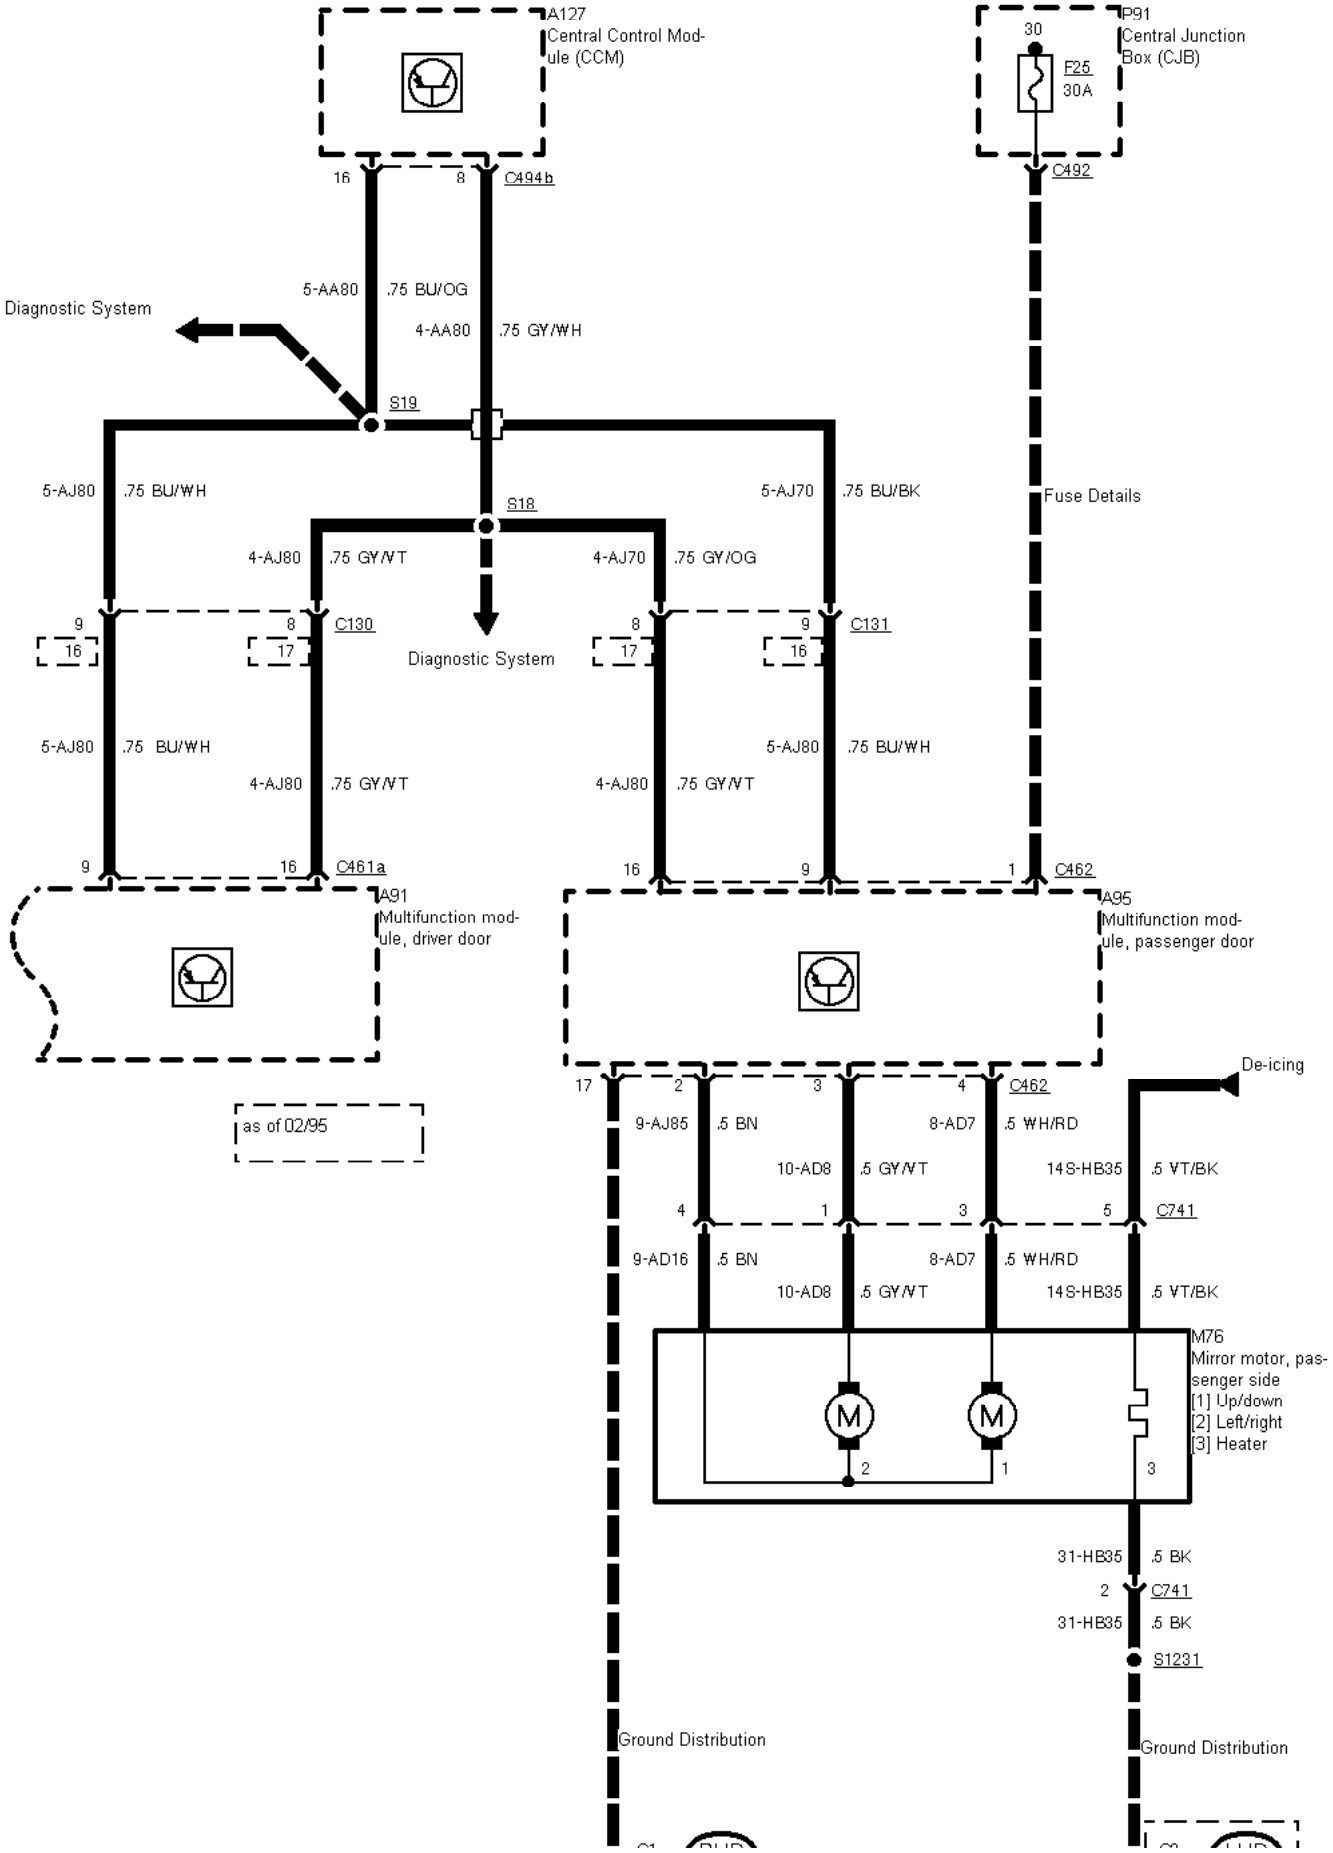


43-02-002 , Power Mirrors with Module , Without memory


A127
Central Control Module (CCM)
P91
Central Junction Box (CJB)
30
F25
30A
C492
16
8
C494b
5-AA80 .75 BU/OG
4-AA80 .75 GY/WH
Diagnostic System
S19
5-AJ80 .75 BU/WH
S18
5-AJ70 .75 BU/BK
Fuse Details
4-AJ80 .75 GY/VT
4-AJ70 .75 GY/OG
9
16
8
17
C130
Diagnostic System
8
17
9
16
C131
5-AJ80 .75 BU/WH
4-AJ80 .75 GY/VT
5-AJ80 .75 BU/WH
4-AJ80 .75 GY/VT
9
16
C461a
16
9
1
C462
A91
Multifunction module, driver door
A95
Multifunction module, passenger door
as of 02/95
17
2
3
4
C462
De-icing
9-AJ85 .5 BN
10-AD8 .5 GY/VT
8-AD7 .5 WH/RD
14S-HB35 .5 VT/BK
4
1
3
5
C741
9-AD16 .5 BN
10-AD8 .5 GY/VT
8-AD7 .5 WH/RD
14S-HB35 .5 VT/BK
M76
Mirror motor, passenger side
[1] Up/down
[2] Left/right
[3] Heater
M
M
2
1
3
31-HB35 .5 BK
2
C741
31-HB35 .5 BK
S1231
Ground Distribution
Ground Distribution







43-02-003 , Power Mirrors with Module , With memory

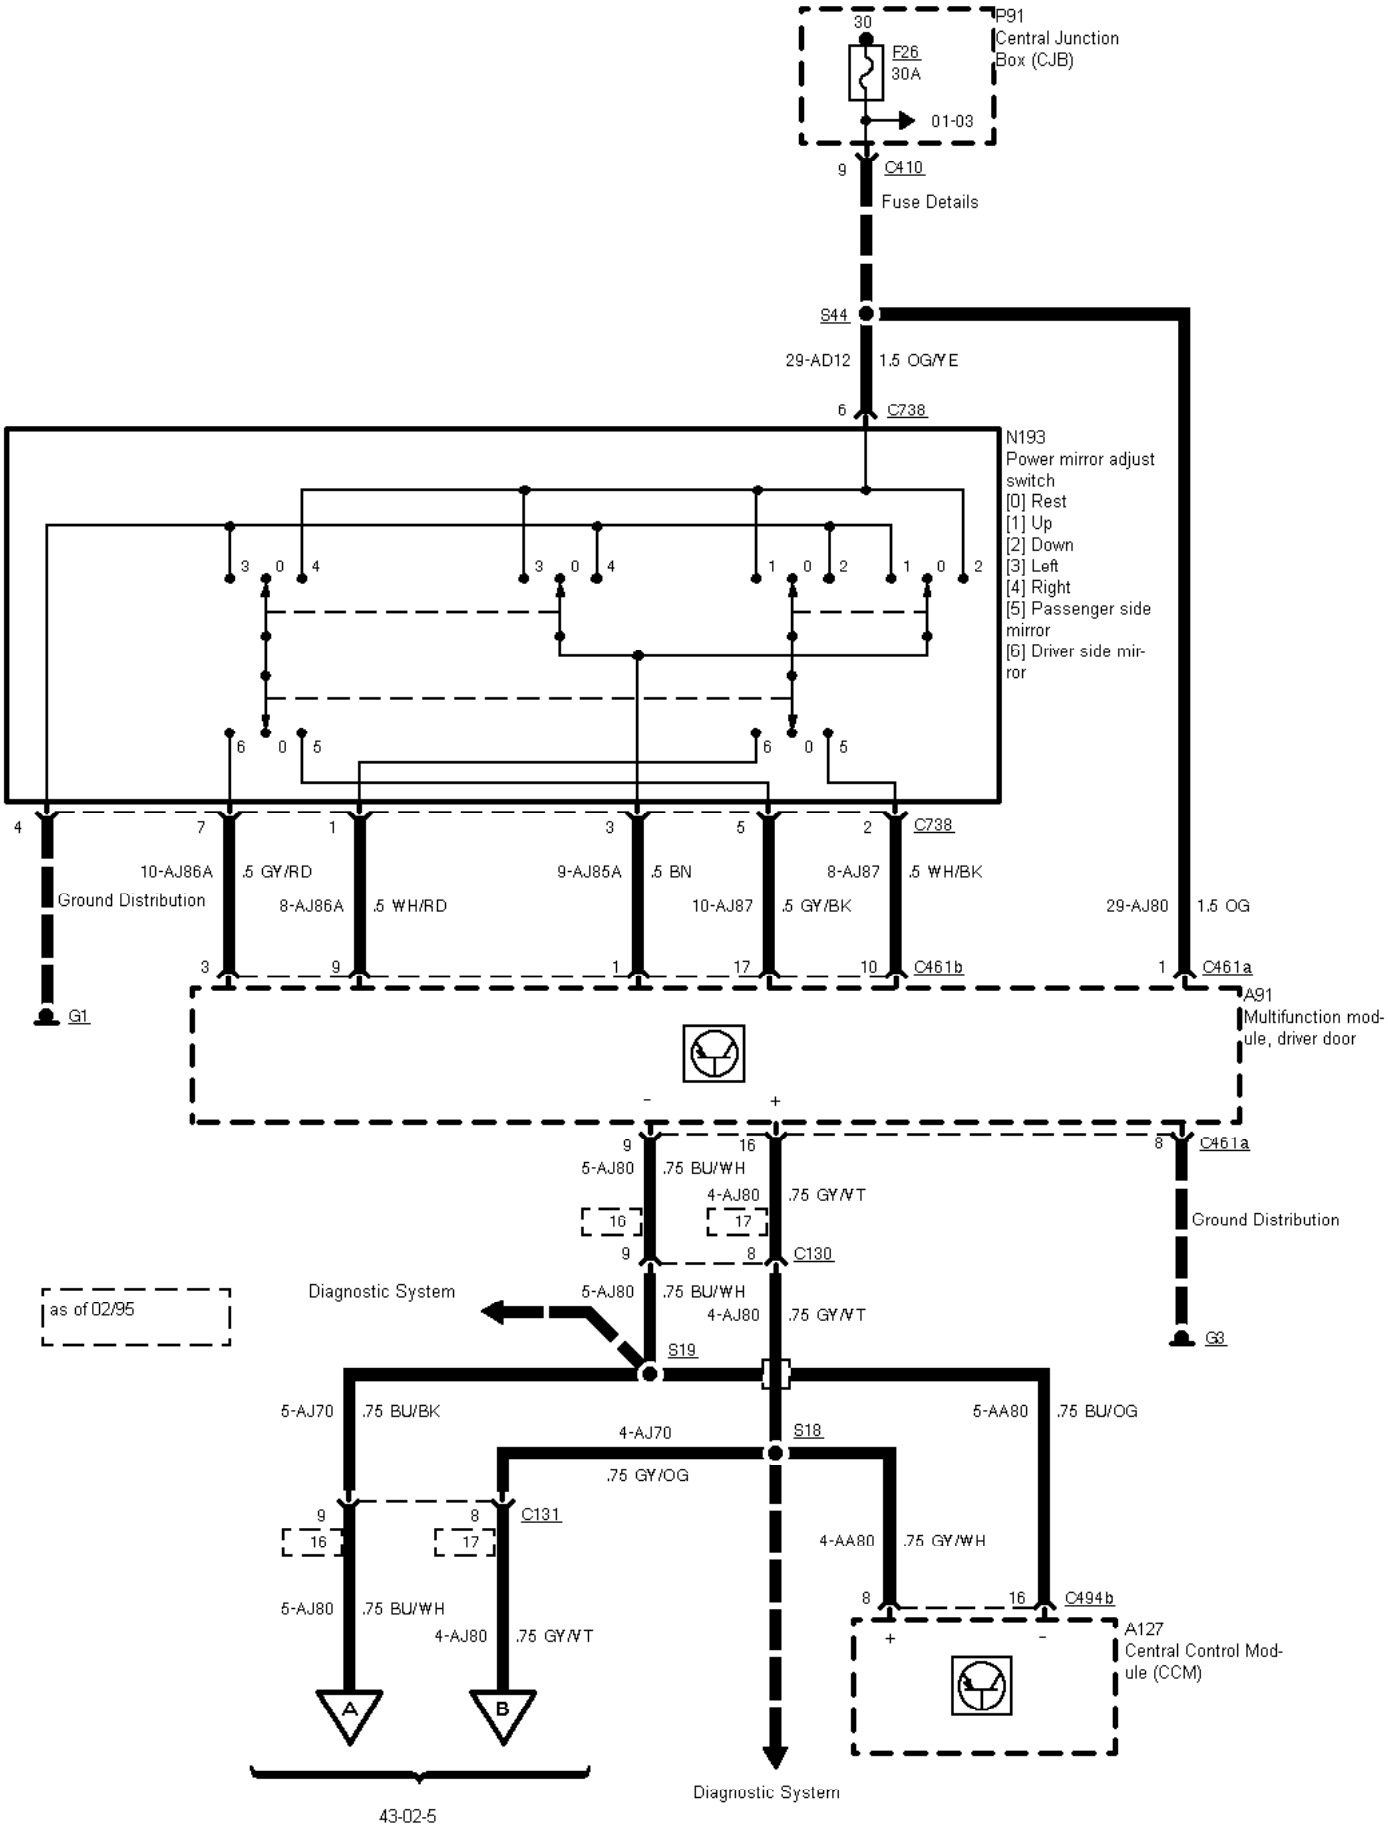

P91
Central Junction Box (CJB)
30
F26
30A
01-03
9
C410
Fuse Details
S44
29-AD12
1.5 OG/YE
6
C738
N193
Power mirror adjust switch
[0] Rest
[1] Up
[2] Down
[3] Left
[4] Right
[5] Passenger side mirror
[6] Driver side mirror
4
7
10-AJ86A
.5 GY/RD
Ground Distribution
8-AJ86A
.5 WH/RD
1
3
9-AJ85A
.5 BN
3
5
10-AJ87
.5 GY/BK
2
8-AJ87
.5 WH/BK
C738
29-AJ80
1.5 OG
3
9
1
17
10
C461b
1
C461a
G1
A91
Multifunction module, driver door
9
5-AJ80
.75 BU/WH
16
16
4-AJ80
.75 GY/VT
17
8
C461a
Ground Distribution
9
8
C130
5-AJ80
.75 BU/WH
4-AJ80
.75 GY/VT
Diagnostic System
as of 02/95
S19
G3
5-AJ70
.75 BU/BK
4-AJ70
.75 GY/OG
S18
5-AA80
.75 BU/OG
9
16
8
17
C131
4-AA80
.75 GY/WH
8
16
C494b
5-AJ80
.75 BU/WH
4-AJ80
.75 GY/VT
A
B
A127
Central Control Module (CCM)
Diagnostic System
43-02-5


43-02-004 , Power Mirrors with Module , With memory

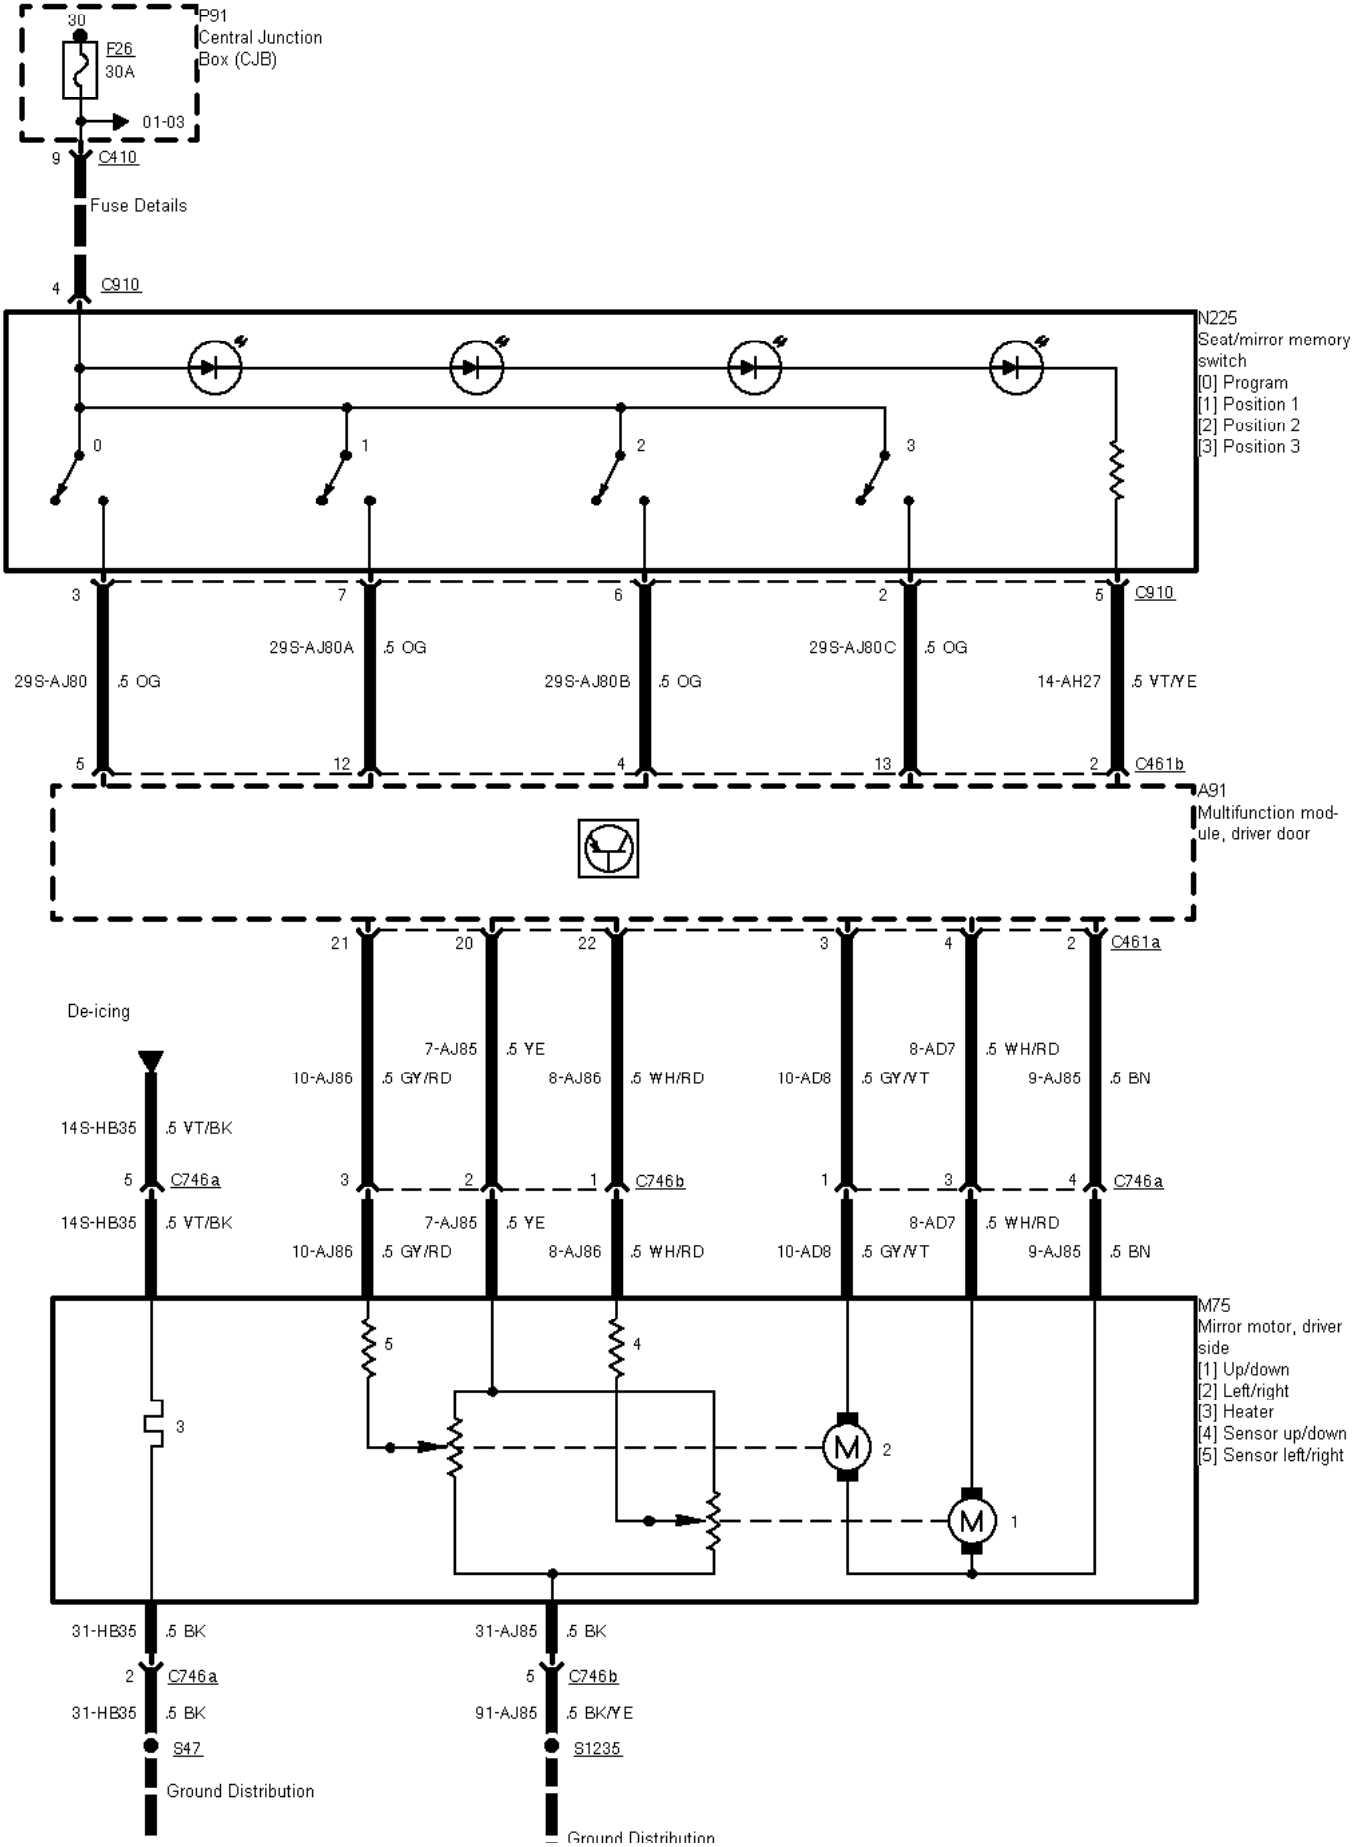
P91
Central Junction Box (CJB)
30
F26
30A
01-03
9
C410
Fuse Details
4
C910
N225
Seat/mirror memory switch
[0] Program
[1] Position 1
[2] Position 2
[3] Position 3
0
1
2
3
3
29S-AJ80
.5 OG
5
7
29S-AJ80A
.5 OG
12
6
29S-AJ80B
.5 OG
4
2
29S-AJ80C
.5 OG
13
5
C910
14-AH27
.5 VT/YE
2
C461b
A91
Multifunction module, driver door
21
20
22
3
4
2
C461a
De-icing
14S-HB35
.5 VT/BK
5
C746a
14S-HB35
.5 VT/BK
10-AJ86
.5 GY/RD
7-AJ85
.5 YE
8-AJ86
.5 WH/RD
10-AD8
.5 GY/VT
8-AD7
.5 WH/RD
9-AJ85
.5 BN
3
2
1
C746b
1
3
4
C746a
M75
Mirror motor, driver side
[1] Up/down
[2] Left/right
[3] Heater
[4] Sensor up/down
[5] Sensor left/right
5
4
3
M
2
M
1
31-HB35
.5 BK
2
C746a
31-HB35
.5 BK
S47
Ground Distribution
31-AJ85
.5 BK
5
C746b
91-AJ85
.5 BK/YE
S1235
Ground Distribution

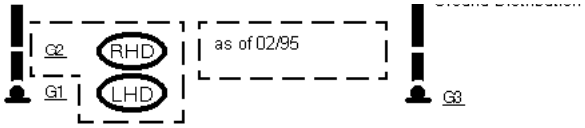

43-02-005 , Power Mirrors with Module , With memory

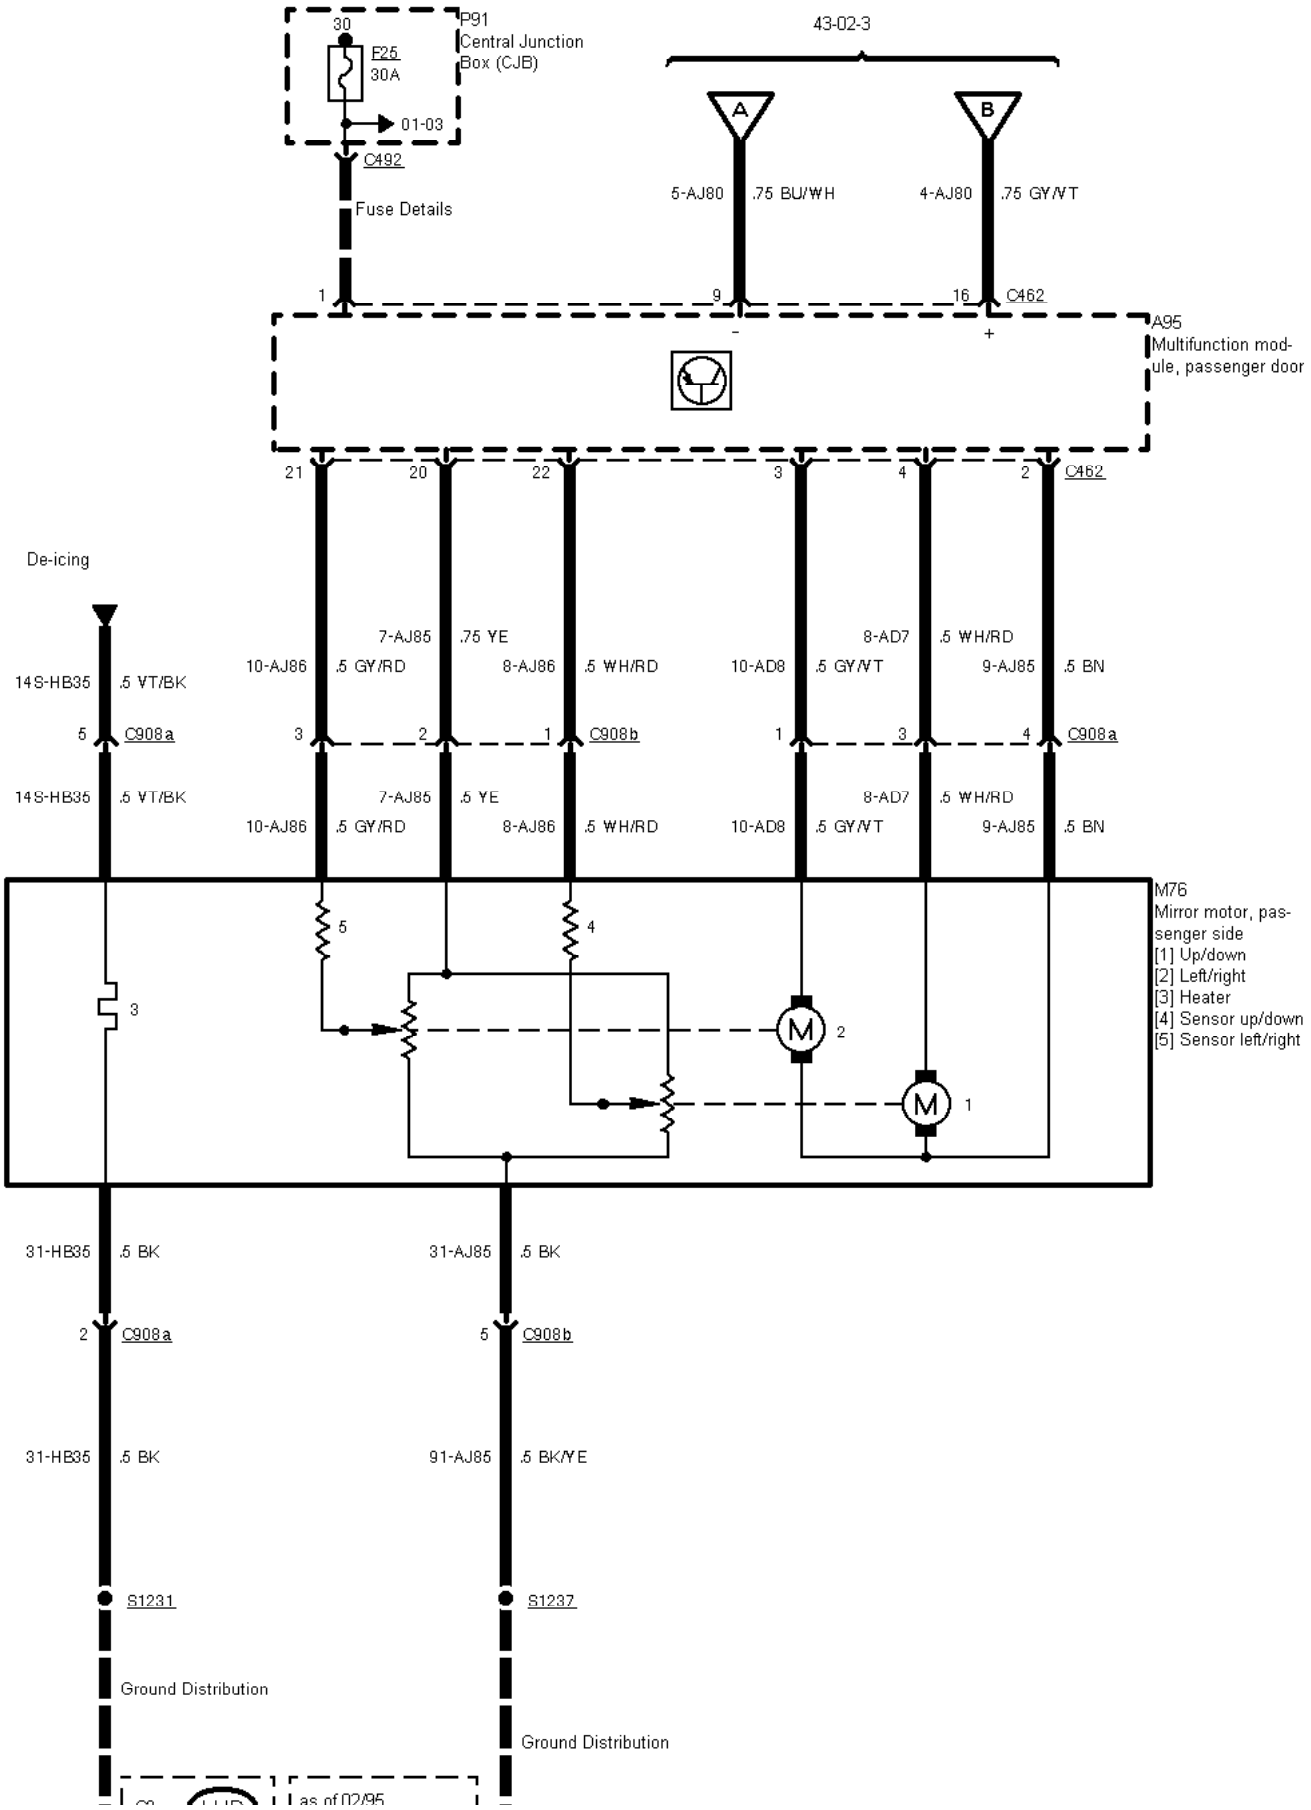
30
F25
30A
P91
Central Junction
Box (CJB)
01-03
C492
Fuse Details
43-02-3
A
B
5-AJ80 .75 BU/WH
4-AJ80 .75 GY/VT
1
9
16
C462
A95
Multifunction mod-
ule, passenger door
21
20
22
3
4
2
C462
De-icing
14S-HB35 .5 VT/BK
5
C908a
10-AJ86 .5 GY/RD
7-AJ85 .75 YE
8-AJ86 .5 WH/RD
10-AD8 .5 GY/VT
8-AD7 .5 WH/RD
9-AJ85 .5 BN
3
2
1
C908b
1
3
4
C908a
14S-HB35 .5 VT/BK
10-AJ86 .5 GY/RD
7-AJ85 .5 YE
8-AJ86 .5 WH/RD
10-AD8 .5 GY/VT
8-AD7 .5 WH/RD
9-AJ85 .5 BN
M76
Mirror motor, pas-
senger side
[1] Up/down
[2] Left/right
[3] Heater
[4] Sensor up/down
[5] Sensor left/right
5
4
3
M
2
M
1
31-HB35 .5 BK
2
C908a
31-AJ85 .5 BK
5
C908b
31-HB35 .5 BK
91-AJ85 .5 BK/YE
S1231
S1237
Ground Distribution
Ground Distribution
as of 02/95


LHD
RHD
G1
G3